



LED projector User Manual NRT - 350




Javes Projector


Address: Room 207, Block B, Seaview Estate, Watson Road, North Point, Hong Kong

Tel: (852) 2887-5151 e-mail: jng@javesprojector.com Web-site: www.javesprojector.com

Remote control Button Table

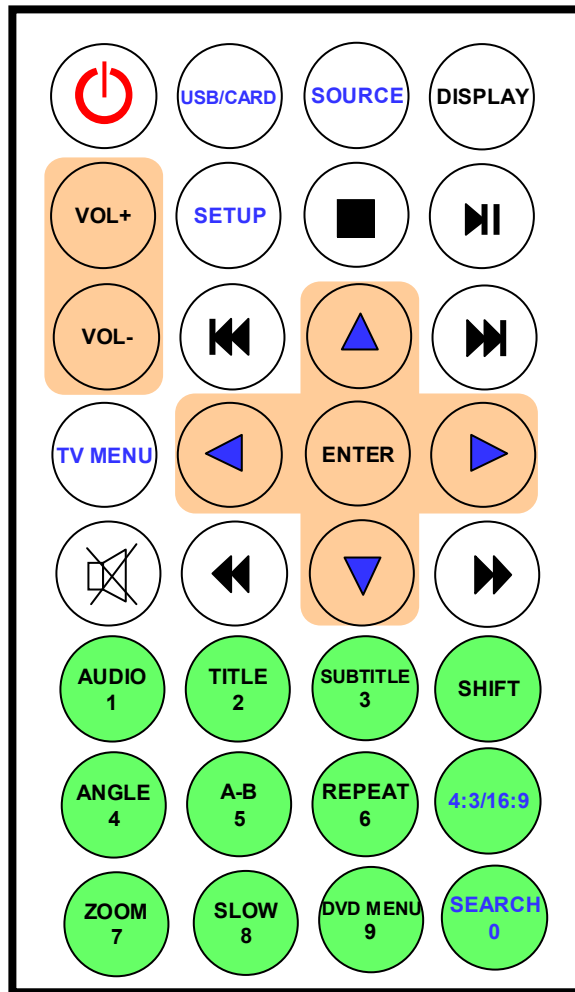

External control panel

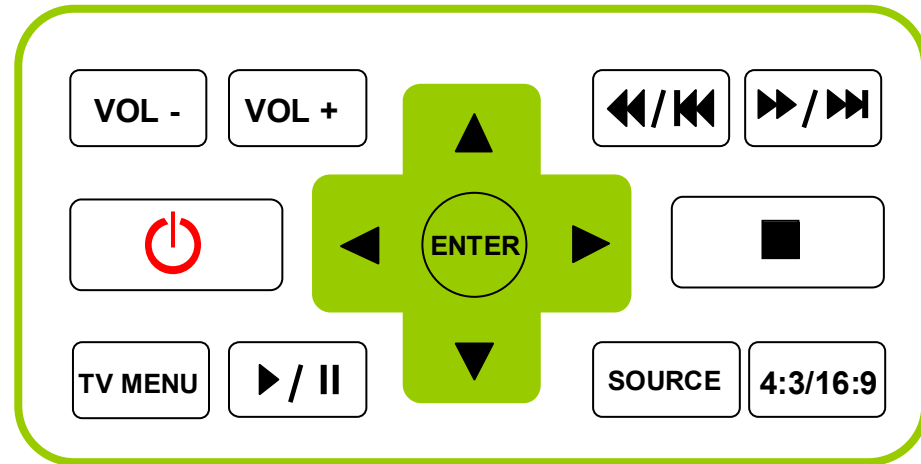


Cable TV Setting

- 1, Source key to TV model
- 2, TV Menu Key to change NTSC type
- 3, TV menu to Auto search the CH.
- 4, Exit the TV menu

R/C Explaining


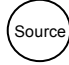

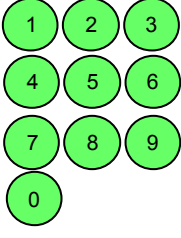
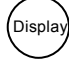


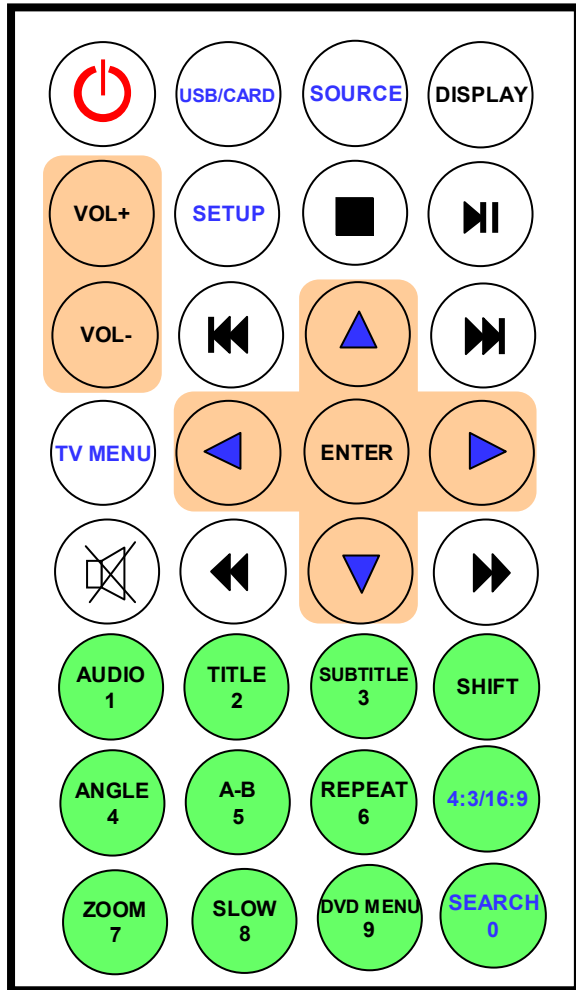



DVD Mode






 



	Power switch		
	Source		DVD function
	DISC&CARD&USB		Chapter setting, 1,2,3.....
	Current information		
	Volume increase		
	Volume decrease		
	Stop		
	Play & Pause		Title selection
	Previous		Subtitle selection
	Up		View angle setting
	Next		A-B repeat setting
	Left		Repeat one, all, off
	Enter for selection		Zoom
	Right		Slow motion
	Audio mute		Jump to track
	Fast backward		DVD Menu
	Down		Shift
	Fast forward		4:3/16:9

R/C Explaining


TV Mode

	Power switch		
	Source		
	Change to DVD Mode		Channel settings
	Current information		
	TV Menu		
	Volume increase		
	Volume decrease		Audio mute
	Menu options & Switching channel		Menu options & Switching channel

VGA&S VIDEO&HDMI Mode

	Power switch
	Source
	Change to DVD Mode
	Current information
	Menu options
	Menu options
	Audio mute

Projector control panel Explaining

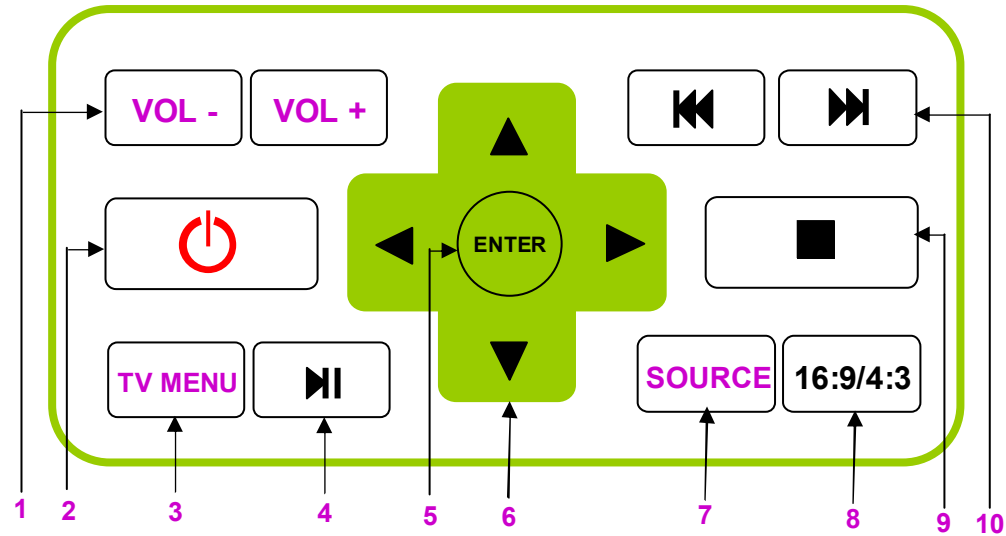


DVD Mode	
1	Volume up / down key
2	Power key
3	DVD Menu
4	Play / pause key
5	Enter for selection
6	Up / down / left / right key (OSD control only)
7	Source
8	4:3 / 16:9 change key
9	Stop key
10	Skip keys


TV Mode	
1	Volume up / down key
2	Power key
3	TV Menu
4	Source

VGA&S VIDEO&HDMI Mode	
1	Volume up / down key
2	Power key
3	TV Menu
4	Source

Projector jack Explaining

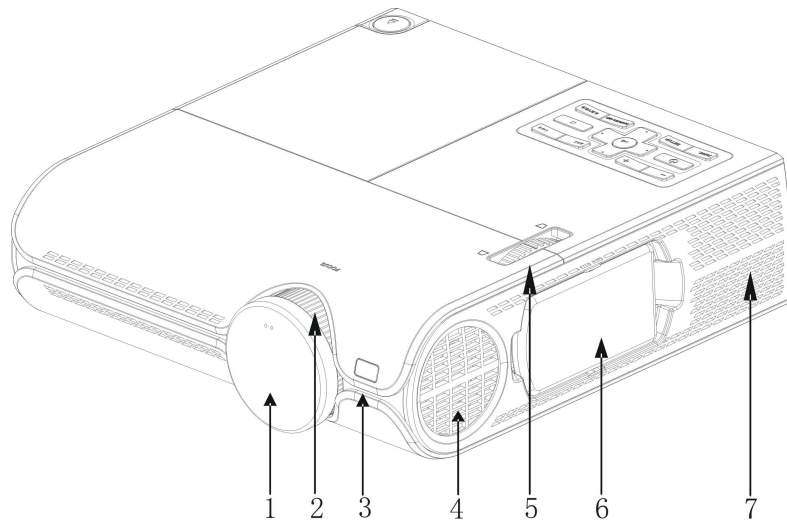

1. Lens cap
2. Projection Lens & Focus adjuster
3. IR remote sensor
4. Speaker (Left)
5. Vertical lens shift dial
6. Remote control location
7. Air exhaust vent (Left)

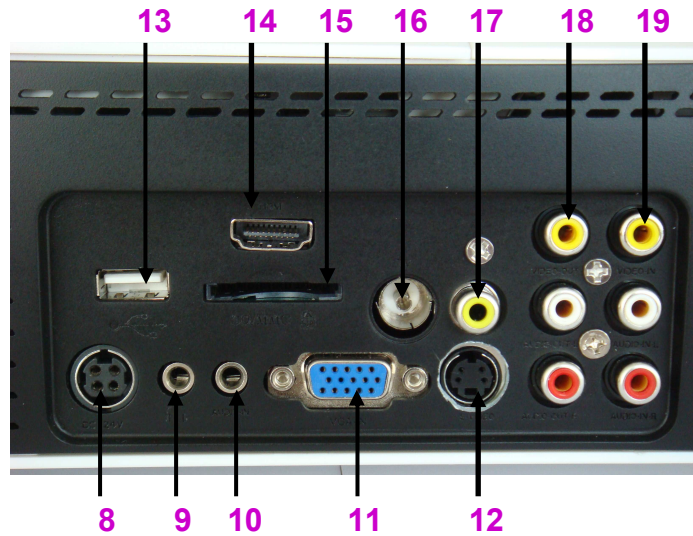

8. DC power input jack (19V-3A)
9. Earphone-Out jack
10. Audio-in jack
11. VGA-in jack
12. S-Video-in jack
13. USB port
14. HDMI-in jack
15. SD/MMC card reader
16. TV-Tuner port
17. Coaxial jack
18. Audio&Video-out jack
19. Audio&Video-in jack